



PCI Express graphics or compute card with auxiliary power adapter installation

© 2012 Hewlett-Packard Development Company, L.P. Printed in the U.S.



688013-001

Introduction

This document describes how to install the following in an HP Z series computer:

- **High-power graphics card** with an auxiliary power adapter cable
- **Compute card** with an auxiliary power adapter cable

Throughout this document, *graphics card* references either type of card.

Kit Contents

- Graphics card or compute card
- Auxiliary power adapter cable
- Warranty information
- Installation instructions (this document)

Your responsibilities

You are responsible for determining whether the product is appropriate for your use and will interface with other equipment without malfunction or damage.

You are also responsible for backing up data before installing any product and for regularly backing up data after installing the product. HP is not liable for any damage to equipment or data loss resulting from the use of any product.

In some HP Z series computers, a discrete graphics card is required for supported use of a compute card.

To determine the compatibility of this product with your computer, view *QuickSpecs* at <http://www.hp.com/go/productbulletin>.

Before installing a high-power graphics card, review the *QuickSpecs* to ensure that your computer meets the correct power requirements to support the card.

IMPORTANT: For step-by-step video instructions showing component removal and replacement procedures for your computer, refer to the Customer Self-Repair Services Media Library at:
<http://www.hp.com/go/sml>.

⚠ WARNING! Any surface or area of the equipment marked with this symbol indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists. To reduce the risk of injury from a hot component, enable the surface to cool before touching.

⚠ WARNING! Any surface or area of the equipment marked with this symbol indicates the presence of an electrical shock hazard. To reduce the risk of injury from electrical shock, do not open any enclosed area marked with this symbol.

⚠ WARNING! To reduce the risk of electric shock or damage to your equipment:

- * Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- * Plug the power cord in a grounded (earthed) outlet that is easily accessible at all times.
- * Disconnect power from the equipment by unplugging the power cord from the electrical outlet.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper computer setup, posture, health, and work habits for computer users, and provides important electrical and mechanical safety information. This guide is located at <http://www.hp.com/ergo>.

⚠ WARNING! If a product is shipped in packaging marked with this symbol, the product must always be lifted by two persons to avoid personal injury due to product weight.

⚠ CAUTION: Static electricity can damage the electronic components of the computer or optional equipment. Before beginning this procedure, ensure that you are static-free by briefly touching a grounded metal object.

⚠ CAUTION: To prevent damage to the computer, observe the following Electrostatic Discharge (ESD) precautions while performing the system parts removal and replacement procedures:

- * Work on a static-free mat.
 - * Wear a static strap to ensure that any accumulated electrostatic charge is discharged from your body to the ground.
 - * Create a common ground for the equipment you are working on by connecting the static-free mat, static strap, and peripheral units to that piece of equipment.
-

NOTE: HP accessories are for use in HP computer products. Accessories have been extensively tested for reliability and are manufactured to high quality standards.

Step 1—Preparing for component installation

NOTE: Computer models vary. All illustrations are examples only.

Accessing the internal components of the computer

1. If you need help preparing the computer for this installation, refer to the:
 - Removal and replacement procedures in the Maintenance and Service Guide for your computer at <http://www.hp.com/support/computer manuals>, or
 - Removal and replacement videos for your computer at <http://www.hp.com/go/sml>.
2. Power down the computer, then disconnect the power cord.
3. Power down all external devices, then disconnect them from the computer.
4. Remove the side access panel.


Removing components

1. If present, remove the card support to enable access to the expansion slots and system board connectors.
 2. Select a PCIe-x16 expansion slot.
 - a. Open the expansion slot retention clamp (1).
 - b. Remove the applicable expansion slot covers (2).
-

NOTE: To identify a PCI Express (PCIe)-x16 expansion slot, see the service label on the side access panel.

NOTE: For optimal cooling, keep the expansion slot adjacent to the fan free or filled with an expansion card that does not obstruct the fan inlet of the graphics card.

Figure 1-1 Opening the retainer and removing the slot covers

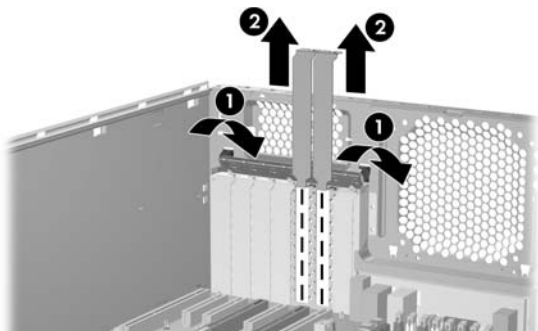


Step 2—Installing the graphics card

NOTE: The high-power graphics card occupies two expansion slots on the system board. HP recommends placing the keyed components of the first card in the primary graphics slot, and the keyed-components of the second card in the secondary graphics slot.

Position the graphics card.

1. While lowering the card into the chassis, rotate the graphics card bulkhead under the rear chassis lip (1).
2. Align the card in a groove of the card guide (2) and pivot the card until level.
3. Press securely into the PCIe expansion slot (3).

Figure 1-2 Installing the graphics card

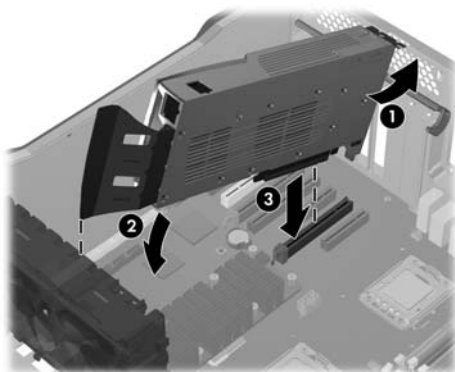

Step 3—Connecting the power

1. Close the expansion slot retention clamp to secure the card in the slot (1).
2. Connect the auxiliary power adapter cable, supplied with this kit, to the computer auxiliary power supply (2), and then to the graphics card (3). Two types of auxiliary power adapter cables are shown below.

NOTE: No connection is made at point (4). If a label covers the outlet at (4), do not remove it.

Figure 1-3 Installing the 6-to-8 pin power adapter cable


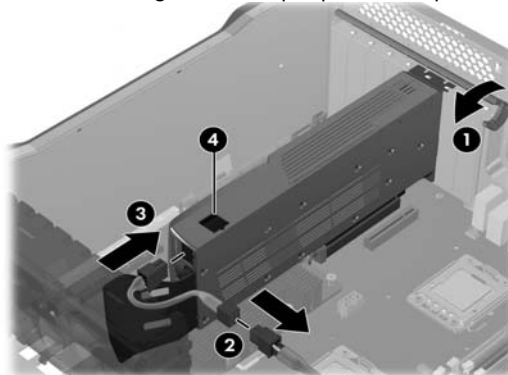


Figure 1-4 Installing the 6-to-dual-6 pin power adapter cable

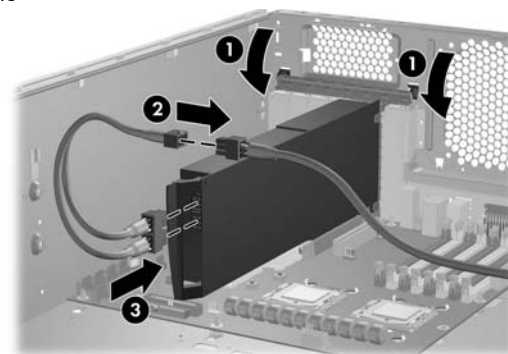

Step 4—Reassembling the computer

1. Reinstall the computer card support, if applicable.
2. Reinstall the side access panel.
3. Reconnect power to the computer and all external devices.
4. Restore power to the computer and all external devices.

Step 5—Configuring the software

For instructions on loading and setting up the graphics drivers, see the manufacturer's documentation shipped with the graphics card.

At the time of component installation, look for device firmware and driver updates, designated for your computer model and operating system from <http://www.hp.com/support>.

日本語

このドキュメントは日本語版が用意されています。
<http://www.hp.com/support/manuals/> (英語サイト) にアクセスしてお使いの製品を選択し、**[Manual language]** (ガイドの言語) ドロップダウンメニューから**[Japanese]** (日本語) を選択してください。
なお、日本向けワークステーション用ドキュメントは、
http://h50146.www5.hp.com/doc/manual/workstation/hp_workstation.html からご覧になれます。



View our **Z420**
inventory here